

# **NOKORI**<sup>®</sup> INSTALLATION INSTRUCTIONS

**IMPORTANT INFORMATION** FOR THE INSTALLER AND THE OWNER



# TABLE OF CONTENT

IMPORTANT SAFETY INSTRUCTIONS	
PARTS & TOOLS	
SITE PREPARATION	

INSTALLATION

-	REMOTE MOUNTING OF TURBINE
	WITH ACCESS UNDER BATH
	PIPING & WIRING UNDER FLOOR & NO ACCESS UNDER BATH
	PIPING & WIRING ABOVE FLOOR & NO ACCESS UNDER BATH
	TURBINE FACTORY INSTALLED
	WITH ACCESS UNDER BATH
	WIRING UNDER FLOOR & NO ACCESS UNDER BATH
	WIRING ABOVE FLOOR & NO ACCESS UNDER BATH
-	BATH INSTALLED AGAINST 1, 2 OR 3 WALLS
cι	JTTING TEMPLATES: CONTROL & AIR VENT

#### **NOKORI° COLLECTION**



**IMPORTANT SAFETY INSTRUCTIONS** 

#### IMPORTANT SAFETY INSTRUCTIONS

PERTAINING TO RISKS OF FIRE, ELECTROCUTION OR PERSONAL INJURY

#### READ AND FOLLOW ALL INSTRUCTIONS . SAVE THESE INSTRUCTIONS

THIS DOCUMENT SUPERCEDES THE INSTALLATION INSTRUCTION IN THE OWNER'S MANUAL.

# WARNINGS

- Risk of hyperthermia; people using medication and/or having an adverse medical history should consult a physician before using a Hydro-thermo massage<sup>®</sup> bathtub equipped with a heater.
- Risk of hyperthermia and possible drowning: do not use a Hydro-thermo massage<sup>®</sup> bathtub equipped with heater immediately following strenuous exercise.
- Risk of fetal injury; pregnant or possibly pregnant women should consult a physician before using a Hydro-thermo massage<sup>®</sup> bathtub equipped with a heater.
- Risk of accidental injury or drowning; do not use drugs or alcohol before or during the use of a Hydro-thermo massage<sup>®</sup> bathtub equipped with a heater.
- Use this unit only for its intended purposes or as described in this manual. Use only accessories or devices recommended by the manufacturer.
- Risk of hyperthermia and possible drowning. Check and adjust water temperature before use. Water temperature exceeding 100°F (38°C) may be injurious to your health.
- To reduce the risk of injury, as with any other conventional bath, do not allow children or physically impaired people to use this unit unless they are closely supervised at all times.
- To avoid injury, exercise care when entering or exiting the Thermomasseur<sup>®</sup>.
- The Geysair should always be connected to the hot water intake. If it is not the case, then, the Geysair should be deactivated via the bath control.

#### **RISK OF ELECTRICAL SHOCK**

- Disconnect electric power before servicing.
- Do not permit electrical appliances (hair dryer, lamp, telephone, radio, television, etc.) within 5' (1,5 m) of the Thermomasseur<sup>®</sup>.
- Before using the Thermomasseur<sup>®</sup>, its exterior construction (podium or skirting) should be finished so that a bather cannot
  accidentally come in contact with electrical components (turbine and power module).
- For indoor use only.

### **IMPORTANT SAFETY INSTRUCTIONS** (cont'd) PERTAINING TO RISKS OF FIRE, ELECTROCUTION OR PERSONAL INJURY

#### READ AND FOLLOW ALL INSTRUCTIONS SAVE THESE INSTRUCTIONS

THIS DOCUMENT SUPERCEDES THE INSTALLATION INSTRUCTION IN THE OWNER'S MANUAL.

#### **ELECTRICAL CONNECTIONS:**

- Never drop or insert objects into any openings.
- The Thermomasseur<sup>®</sup> must be connected only to a supply circuit that is protected by a 20 amp class A ground fault circuit interrupter (GFCI). Optional therapies such as Chromotherapy and/or 2<sup>nd</sup> heated backrest and/or WarmTouchShell<sup>®</sup> must be connected to a supply circuit that is protected by a 15 amp class A ground fault circuit interrupter (GFCI). This interrupter is supplied by a certified electrician and must be tested on a regular basis in accordance with manufacturer's instructions. The GFCI ground must be connected. If defective, do not use the Thermomasseur. Disconnect immediately and call a certified electrician.
- Use 12 AWG (or greater) copper conductors that resist temperatures of at least 194°F (90°C).
- Canada only: for permanently connected units. A green-colored terminal (or a wire connector marked g., gr., ground or grounding) is provided within the terminal compartment (not applicable if unit supplied with an electric plug). To reduce the risk of electrocution, connect this terminal or connector to the grounding terminal of your electric service or supply panel with conductor equivalent in size to the circuit conductors supplying the equipment and be 12 AWG or more.
- All electrical connections must be carried out by a certified electrician and must respect federal, provincial/state, and local building codes and regulations.
- Install in accordance with manufacturer's installation instructions.
- For ThermoMasseur baths using remote turbine installation (not mounted on the bath), grounding continuity must be tested between the bath grounding terminal \_\_\_\_\_ and the bath power supply. Failure to perform the grounding continuity test could result in serious personal injury.

#### WATER LEAK TEST

 Once plumbing is fully installed and before beginning any other work, fill the ThermoMasseur<sup>®</sup> with water to overflow level and wait 30 minutes. Check all plumbing hook-ups and bath for leaks. BainUltra<sup>®</sup> is not responsible for any water damage caused by improper installation (see Warranty section).

#### INSTALLATION INSTRUCTIONS

# PARTS & TOOLS

	A. STANDARD PARTS - PLUMBING						
	DESCRIPTION	ΟΤΥ					
Α	Plated drain clicker	1					
в	Rubber seal	1					
С	Brass drain shoe	1					
D	Nylon conic shaped seal for drain	1					
Е	Brass nut	2					
F	4 in. brass tailpiece	1					
G	Brass overflow to drain pipe	1					
н	Nylon flat seal with flange	1					
I	1-1/2 in. male threaded adaptor	1					
J	1-1/2 overflow male-to-male connector	1					
К	Floor anchor	2					

#### B. OPTIONAL PARTS – PLUMBING (1)

#### ISLAND TUB DRAIN® (ITD) KIT

- Makes installation and servicing easier for removal of bath.
- Allows you to connect the bath drain tailpiece to the plumbing pipe without need for tightening to seal once the bath is lowered to the floor.
- (1): REQUIRED WHEN NO ACCESS IS POSSIBLE UNDER THE BATH. ISLAND TUB DRAIN KIT INCLUDES ONE CONE-SHAPED DECK PLATE AND ONE 6 IN. (15 cm) THREADED TAILPIECE.



J



**8** BainUltra

4

## PARTS & TOOLS

	STANDARD PARTS – THERMOMASSEUR®					
	DESCRIPTION	QTY				
L	Turbine	1				
М	MiaPlus <sup>®</sup> Control	1				
Ν	15 ft. wire for control	1				



#### **OPTIONAL PART – THERMOMASSEUR®**(2)

#### Air vent

(2): AIR VENT IS REQUIRED FOR THERMOMASSEUR BATH WHEN TURBINE IS MOUNTED ON BATH. See pages 34 to 36 for installation instructions.







NOKORI - installation

INSTALLATION INSTRUCTIONS

# SITE PREPARATION

#### PLUMBING

- See faucet manufacturer's specifications for zoning and plan water supply location accordingly.
- Position drain according to bath's technical specifications.

# WARNING

 Baths from Nokori<sup>®</sup> collection cannot be drilled for faucet installation. Faucets must be freestanding or wall-mounted models.



#### BEDDING

Before installing, ensure that the floor underneath the bath can support 1500 lb (680 kg). The bath may sit directly on the floor.

#### SERVICE ACCESS AND VENTILATION

- A service access is necessary. Minimum dimensions are 22 in. x 18 in. (55 cm x 46 cm) to properly reach all electrical components of the system.
- An air vent is necessary. Minimum dimensions are: 2 in. x 4 in. (5 cm x 10 cm) to ensure proper functioning of the turbine.

There is a technical specification sheet for each BainUltra® ThermoMasseur® which includes information such as necessary dimensions of site before installation.

If you do not already have the technical specifications, download from the BainUltra<sup>®</sup> Web site at: **bainultra.com** or call us at: **1 800 463-2187**.

**%** BainUltra

4

## **REMOTE MOUNTING** OF TURBINE WITH ACCESS UNDER BATH

#### **PLUMBING - FLOOR LAYOUT FOR PIPES AND ACCESS**



DIMENSIONS (IN.)	A	В	с	D	E	F
NOKORI 5827	58″	27″	10″	21″	<b>9</b> <sup>5/8</sup> ″	<b>2</b> <sup>1/4</sup> "
NOKORI 6331	63″	31″	101/2"	23″	10″	1 <sup>1/2</sup> "
NOKORI 6429	64″	29″	10″	23″	<b>9</b> <sup>5/8</sup> ″	<b>2</b> <sup>1/4</sup> ″



# NOTE: Detailed plan is provided in the **Documentation / Installation User Guides** section of **Nokori bath models** on our Web site **bainultra.com**.

NOKORI - installation

#### NOKORI<sup>®</sup> BATH

#### INSTALLATION INSTRUCTIONS



DIMENSIONS (IN.)	А	В	С	D	E	F
NOKORI OVAL 6737	60 <sup>3/4</sup> "	32″	9″	18 <sup>1/2</sup> "	<b>26</b> <sup>7/8</sup> ″	7″

NOTE: Detailed plan is provided in the **Documentation / Installation User Guides** section of **Nokori bath models** on our Web site **bainultra.com**.



www.bainultra.com

4

# **REMOTE MOUNTING OF TURBINE WITH ACCESS UNDER BATH**



- If necessary adjust length of the flexible overflow piping connected to the overflow.
- Adjust length on the straight part of the brass overflow pipe (G) to fit with the drain position that varies with different bath models.

•

1 800 463.2187 Definition Monday to Thursday from 8 a.m. to 6 p.m. (EST) - Friday from 8 a.m. to 5 p.m. (EST) Printed in Canada. Copyright © March 2021 Bains Ultra Inc. All rights reserved. 45200618



INSTALLATION INSTRUCTIONS



# WARNINGS

- Access to Geysair<sup>®</sup> backflow preventer is necessary for cleaning of the filter.
- Baths from Nokori<sup>®</sup> collection cannot be drilled for faucet installation. Faucets must be freestanding or wall-mounted models.
- Geysair component cannot be remote mounted. It must stay at original position, attached to bath. Must never be unplugged.

#### **3** ELECTRICAL WIRING OF OPTIONAL COMPONENTS



Measure & Align (2x)

# **REMOTE MOUNTING OF TURBINE WITH ACCESS UNDER BATH**

### **BATH INSTALLATION**

# **HELPFUL TIPS:**

- Carefully place the tub on its side, on a blanket or a corrugated cardboard.
- To easily manipulate the bathtub in a safe way during installation, we recommend using moving straps.



- Be sure the floor is leveled. Use shims as needed.
- Do not remove the protective plastic film on the tub and place a drop-cloth in the tub during installation to protect the acrylic.
- The tub must be securely anchored to floor.
- Apply a bead of silicone around the perimeter of the bath once on the floor.



4

-0



INSTALLATION INSTRUCTIONS



# REMOTE MOUNTING OF TURBINE WITH ACCESS UNDER BATH

### 5 ELECTRONIC CONTROL INSTALLATION - MIAPLUS®

**LOCATION:** Determine the most convenient location, on the wall close to tub. Peel off the protective film of sticker behind the control. You can add a silicone bead to secure to the wall.

# WARNINGS

- Baths from Nokori® collection cannot be drilled for faucet installation. Faucets must be freestanding or wall-mounted model
- DRILLING OF WALL: Refer to the Cutting Template on page 43 for the location and diameter of the holes.

#### TOOLS REQUIRED

Jig saw with fine cut blade

Drill

1/4 in. drill bit

#### TOUCH PAD INSTALLATION

Push wiring through drilled holes.

Remove protective film from watertight seal.

Secure to the wall with permanent waterproof sealant (mold-free clear silicone for bathrooms).

Secure temporarily with a tape for about 24 h.

## 5 ELECTRONIC CONTROL INSTALLATION - DOT

#### **TOOLS REQUIRED**

7/8 in. Hole saw

Drill

#### TOUCH PAD INSTALLATION

Push wiring through drilled holes.

Remove protective film from watertight seal.

Secure to the wall with permanent waterproof sealant (mold-free clear silicone for bathrooms).

Secure temporarily with a tape for about 24 h.





# WARNING

• If the control is not factory installed, you will find it attached to the turbine, or to the electronic control modules.



#### INSTALLATION INSTRUCTIONS

### **REMOTE MOUNTING** OF TURBINE **WITH ACCESS** UNDER BATH

#### REMOTE MOUNTING OF TURBINE



# WARNINGS

- Choose a location for the turbine with the shortest possible distance from the Thermomasseur<sup>®</sup> bath, no more than **15 ft. (4,6m)**, and a maximum of six elbow directional changes to ensure system performance. It can be under the floor, in a closet or any other place that can hide the turbine and if needed optional modules. Easy access must remain possible at all time and sufficient air ventilation is necessary for turbine.
- A service access is necessary. Minimum dimensions are 22 in. x 18 in. (55 cm x 46 cm) to properly reach all electrical components of the system.
- An air vent is necessary. Minimum dimensions are: 2 in. x 4 in. (5 cm x 10 cm) to ensure proper functioning of the turbine.
- Geysair<sup>®</sup> cannot be remotely installed.

www.bainultra.com

### **REMOTE MOUNTING** OF TURBINE **WITH ACCESS** UNDER BATH

#### REMOTE MOUNTING OF TURBINE - AIR PIPE (THERMOMASSEUR®)



- 7 REMOTE MOUNTING OF TURBINE ELECTRICAL CONNECTIONS (THERMOMASSEUR®)
  - See page 17 for electrical diagram



## WARNING

For ThermoMasseur<sup>®</sup> baths using remote turbine installation (not mounted on the bath), grounding continuity must be tested between the bath grounding terminal \_\_\_\_\_ and the bath power supply.
 Failure to perform the grounding continuity test could result in serious personal injury.



NOKORI - installation

#### NOKORI<sup>®</sup> BATH

INSTALLATION INSTRUCTIONS

### **REMOTE MOUNTING** OF TURBINE **WITH ACCESS** UNDER BATH

#### 8 REMOTE MOUNTING OF TURBINE - ELECTRICAL CONNECTIONS OF OPTIONAL THERAPIES

See page 18 for electrical diagram.



# 

- Electrical outlet must be installed by a certified electrician. Installation must be conducted in accordance with all local, provincial/state, and federal building/electrical codes and regulation.
- Connect electrical supply only after all low voltage wiring is properly installed on turbine.
- If you did not follow this last step, shut off and then restart your home's circuit breaker.
- Turbine and air pipe should be clear of building materials and wiring.

#### www.bainultra.com

## **REMOTE MOUNTING** OF TURBINE **WITH ACCESS** UNDER BATH

# 8 REMOTE MOUNTING OF OPTIONAL THERAPIES (TUB ONLY) - ELECTRICAL CONNECTIONS

- See page 18 for electrical diagram.
- A: WarmTouchShell®
- B: Chromatherapy (LED)
- C: DOT WarmTouchShell®
- D: DOT Chromatherapy



## **REMOTE MOUNTING** OF TURBINE **WITH ACCESS** UNDER BATH

**ELECTRICAL DIAGRAM - THERMOMASSEUR** 



# **20A CIRCUIT**

TURBINE WITH GEYSAIR (FOR MIAPLUS®, MIAMULTI®)

•

## **REMOTE MOUNTING** OF TURBINE **WITH ACCESS** UNDER BATH

#### **ELECTRICAL DIAGRAM - THERAPIES**



## **15A CIRCUIT**

INSTALLATION INSTRUCTIONS

# **REMOTE MOUNTING OF TURBINE** PIPING & WIRING **UNDER** FLOOR & **NO ACCESS** UNDER BATH

#### PLUMBING - FLOOR LAYOUT FOR PIPES AND ACCESS



			•	
DIMENSIONS (IN.)	А	В	с	

DIMENSIONS (IN.)	A	В	С
NOKORI 6935	69″	35″	28″
NOKORI 7131	70-1/2″	31″	24″



www.bainultra.com

# **REMOTE MOUNTING OF TURBINE** PIPING & WIRING **UNDER** FLOOR & **NO ACCESS** UNDER BATH

## PLUMBING - FLOOR LAYOUT FOR PIPES AND ACCESS (CONT'D)



NOTE: Detailed plan is provided in the **Documentation / Installation User Guides** section of **Nokori bath models** on our Web site **bainultra.com**.



# **&** BainUltra

#### NOKORI<sup>®</sup> BATH

#### INSTALLATION INSTRUCTIONS



	A. STANDARD PARTS - PLUMBING					
	DESCRIPTION	ΟΤΥ				
A	Plated drain clicker	1				
В	Rubber seal	1				
С	Brass drain shoe	1				
D	Nylon conic shaped seal for drain	1				
E	Brass nut	2				
F	4 in. brass tailpiece	1				
G	Brass overflow to drain pipe	1				
н	Nylon flat seal with flange	1				
T	1-1/2 in. male threaded adaptor	1				
J	1-1/2 overflow male-to-male connector	1				
К	Floor anchor	2				

# 

- If necessary adjust length of the flexible overflow piping connected to the overflow.
- Adjust length on the straight part of the brass overflow pipe (G) to fit with the drain position that varies with different bath models.



www.bainultra.com

# REMOTE MOUNTING OF TURBINE PIPING & WIRING UNDER FLOOR & NO ACCESS UNDER BATH

### TURBINE & GEYSAIR INSTALLATION (FOR THERMOMASSEUR®)



# WARNINGS

- Access to Geysair® backflow preventer is necessary for cleaning of the filter.
- Baths from Nokori<sup>®</sup> collection cannot be drilled for faucet installation. Faucets must be freestanding or wall-mounted models.
- Geysair component cannot be remote mounted. It must stay at original position, attached to bath. Must never be unplugged.

## ELECTRICAL WIRING OF OPTIONAL COMPONENTS



# **8** BainUltra

#### NOKORI<sup>®</sup> BATH

#### INSTALLATION INSTRUCTIONS



# WARNINGS

- Be sure the floor is leveled. Use shims as needed.
- Do not remove the protective plastic film on the tub and place a drop-cloth in the tub during installation to protect the acrylic.
- The tub must be securely anchored to floor.
- Apply a bead of silicone around the perimeter of the bath once on the floor.



INSTALLATION INSTRUCTIONS



# WARNINGS

- Be sure the floor is leveled. Use shims as needed.
- Do not remove the protective plastic film on the tub and place a drop-cloth in the tub during installation to protect the acrylic.
- The tub must be securely anchored to floor.
- Apply a bead of silicone around the perimeter of the bath once on the floor.



•



А

INSTALLATION INSTRUCTIONS

# REMOTE MOUNTING OF TURBINE

PIPING & WIRING UNDER FLOOR & NO ACCESS UNDER BATH

### **BATH INSTALLATION**

DRAIN CONNECTION WITH ISLAND TUB DRAIN® (ITD) - INFORMATION



NOKORI - installation

www.bainultra.com

# REMOTE MOUNTING OF TURBINE

PIPING & WIRING UNDER FLOOR & NO ACCESS UNDER BATH

#### FOR NEXT STEPS SEE SECTION:

INSTALLATION - REMOTE MOUNTING OF TURBINE WITH ACCESS UNDER BATH

5	ELECTRONIC CONTROL INSTALLATION – MIAPLUS <sup>®</sup>
5	ELECTRONIC CONTROL INSTALLATION – DOT
6	REMOTE MOUNTING OF TURBINE
7	REMOTE MOUNTING OF TURBINE – AIR PIPE (THERMOMASSEUR®)14
7	REMOTE MOUNTING OF TURBINE – ELECTRICAL CONNECTIONS (THERMOMASSEUR®)
8	REMOTE MOUNTING OF TURBINE – ELECTRICAL CONNECTIONS OF OPTIONAL THERAPIES
8	REMOTE MOUNTING OF OPTIONAL THERAPIES (TUB ONLY) – ELECTRICAL CONNECTIONS
	ELECTRICAL DIAGRAM – THERMOMASSEUR
	ELECTRICAL DIAGRAM – THERAPIES





	TOOLS REQUIRED	
[	Drill	
J	ig saw with fine cut blade	
ŀ	Hole Saw	



www.bainultra.com

### 2 TURBINE & GEYSAIR INSTALLATION (FOR THERMOMASSEUR®) PASSAGE FOR THE AIR INLET PIPE AND ELECTRICAL WIRING OF OPTIONAL THERAPIES





#### CUTTING AREA FOR AIR PIPE AND WIRES







# REMOTE MOUNTING OF TURBINE PIPING & WIRING ABOVE FLOOR & NO ACCESS UNDER BATH

2 TURBINE & GEYSAIR INSTALLATION (FOR THERMOMASSEUR®) PASSAGE FOR THE AIR INLET PIPE AND ELECTRICAL WIRING OF OPTIONAL THERAPIES



(\*): LOCATION SHOWN AS AN EXAMPLE MAY DIFFER ACCORDING TO THE POSITION OF REMOTE COMPONENTS AND LOCATION OF BATH. SEE PAGE 21 FOR INSTALLATION OF ISLAND TUB DRAIN<sup>®</sup> (ITD)



To easily manipulate the bathtub in a safe way during installation, we recommend using moving straps.

# WARNINGS

- Do not remove the protective plastic film on the bathtub and place a drop-cloth in the bath during installation to protect the acrylic.
- The bath must be securely anchored to floor.
- Apply a bead of silicone around the perimeter of the bath once on the floor.

www.bainultra.com

NOKORI - installation

## **REMOTE MOUNTING OF TURBINE** PIPING & WIRING **ABOVE** FLOOR & **NO ACCESS** UNDER BATH

FOR NEXT STEPS, FOLLOW INSTRUCTIONS: INSTALLATION – REMOTE MOUNTING OF TURBINE, PIPING UNDER FLOOR WITH NO ACCESS UNDER BATH

3	ELECTRICAL WIRING OF OPTIONAL COMPONENTS	2
4	BATH INSTALLATION	3



(\*): LOCATION SHOWN AS AN EXAMPLE MAY DIFFER ACCORDING TO THE POSITION OF REMOTE COMPONENTS AND LOCATION OF BATH. SEE PAGE 21 FOR INSTALLATION OF ISLAND TUB DRAIN®(ITD)



To easily manipulate the bathtub in a safe way during installation, we recommend using moving straps.

# WARNINGS

- Do not remove the protective plastic film on the bathtub and place a drop-cloth in the bath during installation to protect the acrylic.
- The bath must be securely anchored to floor.
- Apply a bead of silicone around the perimeter of the bath once on the floor.

# REMOTE MOUNTING OF TURBINE

PIPING & WIRING **ABOVE** FLOOR & **NO ACCESS** UNDER BATH

FOR NEXT STEPS SEE SECTION:

INSTALLATION - REMOTE MOUNTING OF TURBINE WITH ACCESS UNDER BATH

5	ELECTRONIC CONTROL INSTALLATION – MIAPLUS <sup>®</sup>
5	ELECTRONIC CONTROL INSTALLATION – DOT (THERAPIES)
6	REMOTE MOUNTING OF TURBINE
7	REMOTE MOUNTING OF TURBINE – AIR PIPE (THERMOMASSEUR®)14
7	REMOTE MOUNTING OF TURBINE – ELECTRICAL CONNECTIONS (THERMOMASSEUR®)
8	REMOTE MOUNTING OF TURBINE – ELECTRICAL CONNECTIONS OF OPTIONAL THERAPIES
8	REMOTE MOUNTING OF OPTIONAL THERAPIES (TUB ONLY) – ELECTRICAL CONNECTIONS
	ELECTRICAL DIAGRAM – THERMOMASSEUR17
	ELECTRICAL DIAGRAM – THERAPIES

•

 TURBINE FACTORY INSTALLED WITH ACCESS UNDER BATH

 Image: state of the s

DIMENSIONS (IN.)	Α	В	с	D	E	F
NOKORI 5827	58″	27″	10″	21″	<b>9</b> <sup>5/8</sup> ″	<b>2</b> <sup>1/4</sup> ″
NOKORI 6331	63″	31″	101/2″	23″	10″	1 <sup>1/2</sup> "
NOKORI 6429	64″	29″	10″	23″	<b>9</b> <sup>5/8</sup> ″	<b>2</b> <sup>1/4</sup> ″



# NOTE: Detailed plan is provided in the **Documentation / Installation User Guides** section of **Nokori bath models** on our Web site **bainultra.com**.

32 (

INSTALLATION INSTRUCTIONS

## TURBINE FACTORY INSTALLED WITH ACCESS UNDER BATH

#### PLUMBING





А	STANDARD	PARTS -	PLUMBING
/ \.		171113	

	DESCRIPTION	ΟΤΥ
Α	Plated drain clicker	1
В	Rubber seal	1
С	Brass drain shoe	1
D	Nylon conic shaped seal for drain	1
Е	Brass nut	2
F	4 in. brass tailpiece	1
G	Brass overflow to drain pipe	1
Н	Nylon flat seal with flange	1
I	1-1/2 in. male threaded adaptor	1
J	1-1/2 overflow male-to-male connector	1
К	Floor anchor	2

# WARNINGS

- If necessary adjust length of the flexible overflow piping connected to the overflow.
- Adjust length on the straight part of the brass overflow pipe (G) to fit with the drain position that varies with different bath models.





**8** BainUltra

Some products, specifications, and services mentioned in this manual are described in pending patent applications or are protected by patents.

## TURBINE FACTORY INSTALLED WITH ACCESS UNDER BATH

2 AIR VENT OPENING (See page 4)

#### **OPTIONAL PART – THERMOMASSEUR®**

Air vent



## WARNING

AN AIR VENT OF A MINIMUM OF 8 SQUARE INCHES IS REQUIRED TO HAVE AIR ENTRY AND GOOD VENTILATION FOR THE TURBINE. SINCE THE TUR-BINE IS MOUNTED ON THE BATH, YOU MUST MAKE AN OPENING ON ONE SIDE OF THE BATH.

TOOLS REQUIRED			فدودور
Silicone			
Drill	SILICONE		
Jig saw with fine cut blade	Sur		
		T	

# **HELPFUL TIP:**

IF INSTALLATION IS FOR TURBINE FACTORY INSTALLED WITH PIPING ABOVE FLOOR AND NO ACCESS UNDER BATH, THE AIR VENT CAN BE USED FOR GEYSAIR HOSE AND ELECTRICAL WIRES.
INSTALLATION INSTRUCTIONS

# TURBINE FACTORY INSTALLED WITH ACCESS UNDER BATH

**2** AIR VENT OPENING – POSSIBLE LOCATIONS

	<b>OPENINGS – POSSIBLE LOCATIONS</b>
1	OPPOSITE SIDE OF BACKREST
2	LEFT HAND SIDE
3	right hand side
4	SIDE OF BACKREST





O

### 2 AIR VENT OPENING - CUTTING TEMPLATE OF WALL OF BATH

# LOCATION #1 & 4 - DETAIL

LOCATION #2 – DETAIL (LOCATION #3 INVERTED)



#### www.bainultra.com

•

TURBINE FACTORY INSTALLED WITH ACCESS UNDER BATH



- STEPS
- Apply a bead of silicone all around the backside of the air vent.
- 2 Place the air vent directly over opening on bath and apply pressure against the air vent to spread the silicone evenly.
- **3** Adjust and level the air vent in place and secure temporarily with a tape for about 24h.

B ELECTRICAL WIRING OF TURBINE AND GEYSAIR® (THERMOMASSEUR®)



- Access to Geysair® backflow preventer is necessary for cleaning of the filter.
- Geysair component cannot be remote mounted. It must stay at original position, attached to bath. Must never be unplugged.

INSTALLATION INSTRUCTIONS

# TURBINE FACTORY INSTALLED WITH ACCESS UNDER BATH

### 4 ELECTRONIC CONTROL INSTALLATION - MIAPLUS® LOCATION

**LOCATION:** Determine the most convenient location, on the wall close to tub. Peel off the protective film of sticker behind the control. You can add a silicone bead to secure to the wall.

# 

- Baths from Nokori® collection cannot be drilled for faucet installation. Faucets must be freestanding or wall-mounted model
- DRILLING OF WALL: Refer to the Cutting Template on page 48 for the location and diameter of the holes.

### **TOOLS REQUIRED**

Jig saw with fine cut blade

Drill

1/4 in. drill bit

### TOUCH PAD INSTALLATION

Push wiring through drilled holes.

Remove protective film from watertight seal.

Secure to the wall with permanent waterproof sealant (mold-free clear silicone for bathrooms).

Secure temporarily with a tape for about 24 h.

# 4 ELECTRONIC CONTROL INSTALLATION - DOT

#### **TOOLS REQUIRED**

7/8 in. Hole saw

Drill

### TOUCH PAD INSTALLATION

Push wiring through drilled holes.

Remove protective film from watertight seal.

Secure to the wall with permanent waterproof sealant (mold-free clear silicone for bathrooms).

Secure temporarily with a tape for about 24 h.



DOT WarmTouchShell<sup>®</sup> (WTS)

DOT Chromatherapy (LED)

155



# 

• If the control is not factory installed, you will find it attached to the turbine, or to the electronic control modules.

# TURBINE FACTORY INSTALLED WITH ACCESS UNDER BATH

#### 5 **TURBINE FACTORY INSTALLED – ELECTRICAL CONNECTIONS (THERMOMASSEUR®)**



ELECTRICAL DIAGRAM – THERMOMASSEUR
ELECTRICAL DIAGRAM – THERAPIES

- Electrical outlet must be installed by a certified electrician.
- Installation must be conducted in accordance with all local, provincial/state, and federal building/electrical codes and regulation.
- Connect electrical supply only after all low voltage wiring is properly installed on turbine.
- If you did not follow this last step, shut off and then restart your home's circuit breaker.
- Turbine and air pipe should be clear of building materials and wiring (See page 15 for electrical diagram).

INSTALLATION INSTRUCTIONS



Floor surface

NOKORI - installation

. .

100

RUICON

4

1<sup>1/4</sup>" Maximum



NOTE: Detailed plan is provided in the **Documentation / Installation User Guides** section of **Nokori bath models** on our Web site **bainultra.com**.

# **%** BainUltra

### NOKORI<sup>®</sup> BATH

INSTALLATION INSTRUCTIONS

# TURBINE FACTORY INSTALLED WIRING UNDER FLOOR & NO ACCESS UNDER BATH

# PLUMBING

**HELPFUL TIP:** Carefully place the tub on its side, on a blanket or a corrugated cardboard.

Island Tub Drain

# WARNING

 Refer to supplied instructions for Island Tub Drain installation.

Α.	STANDARD	PARTS - PLUMBING	

	Î.	
	DESCRIPTION	OTY
Α	Plated drain clicker	1
В	Rubber seal	1
C Brass drain shoe	Brass drain shoe	1
D	Nylon conic shaped seal for drain	1
Е	Brass nut	2
F	4 in. brass tailpiece	1
G	<ul> <li>G Brass overflow to drain pipe</li> <li>H Nylon flat seal with flange</li> <li>I 1-1/2 in. male threaded adaptor</li> </ul>	
н		
I		
J	1-1/2 overflow male-to-male connector	1
К	Floor anchor	2

# WARNINGS

- If necessary adjust length of the flexible overflow piping connected to the overflow.
- Adjust length on the straight part of the brass overflow pipe **(G)** to fit with the drain position that varies with different bath models.



Measure

& Align (2x)

www.bainultra.com

# TURBINE FACTORY INSTALLED WIRING UNDER FLOOR & NO ACCESS UNDER BATH

# FOR NEXT STEPS FOLLOW THE INSTRUCTIONS: TURBINE FACTORY INSTALLED WITH ACCESS UNDER BATH

2	AIR VENT OPENING
3	ELECTRICAL WIRING OF TURBINE AND GEYSAIR® (THERMOMASSEUR®)
4	ELECTRONIC CONTROL INSTALLATION – MIAPLUS <sup>®</sup>
4	ELECTRONIC CONTROL INSTALLATION – DOT
5	TURBINE FACTORY INSTALLED – ELECTRICAL CONNECTIONS (THERMOMASSEUR®)
	ELECTRICAL DIAGRAM – THERMOMASSEUR
	ELECTRICAL DIAGRAM – THERAPIES

# **BATH INSTALLATION**

# **HELPFUL TIPS:**

- Carefully place the tub on its side, on a blanket or a corrugated cardboard.
- To easily manipulate the bathtub in a safe way during installation, we recommend using moving straps.



# WARNINGS

- Be sure the floor is leveled. Use shims as needed.
- Do not remove the protective plastic film on the tub and place a drop-cloth in the tub during installation to protect the acrylic.
- The tub must be securely anchored to floor.
- Apply a bead of silicone around the perimeter of the bath once on the floor.

INSTALLATION INSTRUCTIONS

# TURBINE FACTORY INSTALLED WIRING UNDER FLOOR & NO ACCESS UNDER BATH

# **6** BATH INSTALLATION

# WARNINGS

- Be sure the floor is leveled. Use shims as needed.
- Do not remove the protective plastic film on the tub and place a drop-cloth in the tub during installation to protect the acrylic.
- The tub must be securely anchored to floor.
- Apply a bead of silicone around the perimeter of the bath once on the floor.

# DRAIN CONNECTION WITH ISLAND TUB DRAIN® (ITD) - INFORMATION



. .

0

LICON

**8** BainUltra









### CUTTING AREA FOR AIR PIPE AND WIRES



### HOLE – LOCATION & MINIMUM DIMENSIONS

www.bainultra.com

# **TURBINE FACTORY INSTALLED** WIRING **ABOVE** FLOOR & **NO ACCESS** UNDER BATH

FOR NEXT STEPS FOLLOW THE INSTRUCTIONS: TURBINE FACTORY INSTALLED WITH ACCESS UNDER BATH

4	ELECTRONIC CONTROL INSTALLATION – MIAPLUS <sup>®</sup> )
4	ELECTRONIC CONTROL INSTALLATION – DOT
5	TURBINE MOUNTED ON BATH – ELECTRICAL CONNECTIONS (THERMOMASSEUR®)
	ELECTRICAL DIAGRAM – THERMOMASSEUR
	ELECTRICAL DIAGRAM – THERAPIES

FOR NEXT STEPS FOLLOW THE INSTRUCTIONS: TURBINE FACTORY INSTALLED WITH WIRING UNDER FLOOR AND NO ACCESS UNDER BATH

6 BATH INSTALLATION	4	12
---------------------	---	----

# BATH INSTALLED AGAINST 1, 2, OR 3 WALLS

### TILE FLANGE

When installing the bath against one, two or three walls, a tile flange can be helpful to have the perfect finish to the installation. A tile flange, not factory installed, can be ordered with a Nokori<sup>®</sup> bath.

### INSTALLATION OF A TILE FLANGE

#### **TOOLS REQUIRED**

Miter box

Finishing saw

### INSTALLATION

1	Cut a $45^{\circ}$ angle with the help of the miter box
2	Adjust the length at both ends and cut straight
3	Peel off the film of the double sided tape.
4	Set the tile flange on the edge of bath and square against the wall
5	Apply a waterproof sealant at the corners of the tile flange



1



**8** BainUltra



www.bainultra.com

NOKORI®



1 800 463.2187 Monday to Thursday from 8 a.m. to 6 p.m. (EST) - Friday from 8 a.m. to 5 p.m. (EST) Du lundi au jeudi, De 8h à 18h (HE) - Vendredi de 8h à 17h (HE) Printed in Canada. Copyright © March 2021 BainUltra Inc. All rights reserved. 45200618 Imprimé au Canada. Copyright © mars 2021 BainUltra inc. Tous droits réservés.



NOKORI®

**CUTTING TEMPLATES / GABARITS DE PERÇAGE** 





#### www.bainultra.com

Some products, specifications, and services mentioned in this manual are described in pending patent applications or are protected by patents. Certains produits, spécifications et services mentionnés dans le présent manuel sont décrits dans des demandes de brevets en instance ou protégés par des brevets.